

|                                                                       |                                |
|-----------------------------------------------------------------------|--------------------------------|
| <b>Subject:</b><br><br><b>DTC U0323/U0423/U3000 CANNOT BE DELETED</b> | <b>M-Tips No.:</b> MT-010/18   |
|                                                                       | <b>Last Issued:</b> 11/27/2018 |

## BULLETIN NOTES

This M-Tip supersedes the previously issued M-Tip(s) listed below: The changes are noted in Red.

| Previous M-TIPs: | Date(s) Issued: |
|------------------|-----------------|
| MT-002/16        | 12/20/16        |

## APPLICABLE MODEL(S)/VINS

|                  |                |                |
|------------------|----------------|----------------|
| 2014-2018 Mazda3 | 2016-2019 MX-5 | 2016-2019 CX-5 |
| 2016-2018 Mazda6 | 2016-2019 CX-3 | 2016-2019 CX-9 |

## DESCRIPTION

Some vehicles (with MAZDA CONNECT) may exhibit a condition where DTC U0323(PCM) / U0423(ABS) /U3000(IC) CANNOT be deleted when the TPMS warning light flashes and/or the TCS/DSC indicator lights are illuminated. This can happen if the ignition is turned OFF within 20 seconds after the ignition is turned ON in one of the following two situations.

1. The "ROOM" fuse (Engine compartment) is NOT installed when battery level is low.
2. The CMU (Connectivity Master Unit) is NOT connected.

## REPAIR PROCEDURE

3. Confirm the CMU is connected.
4. Confirm the ROOM fuse is installed properly.
5. Change the Temperature and the Distance setting in MAZDA CONNECT System Settings.
  - Temperature - Fahrenheit to Celsius (or vice versa)
  - Distance - Miles to Kilometers (or vice versa)



4. Turn the ignition OFF.
5. Remove the ROOM fuse.
6. Press and hold the tripmeter reset button more than 5 seconds.
7. Install the ROOM fuse.
8. Turn the ignition ON.
9. Delete the DTC(s) using M-MDS.
10. Return the original unit of Temperature and Distance in MAZDA CONNECT System Settings.

**Note:** If DTC codes do not clear, refer to Workshop Manual DTC U0323 [SKYACTIV-G].