


**>> OWNER'S MANUAL
QUICK REFERENCE GUIDE**



The Power to Surprise


Interior Overview

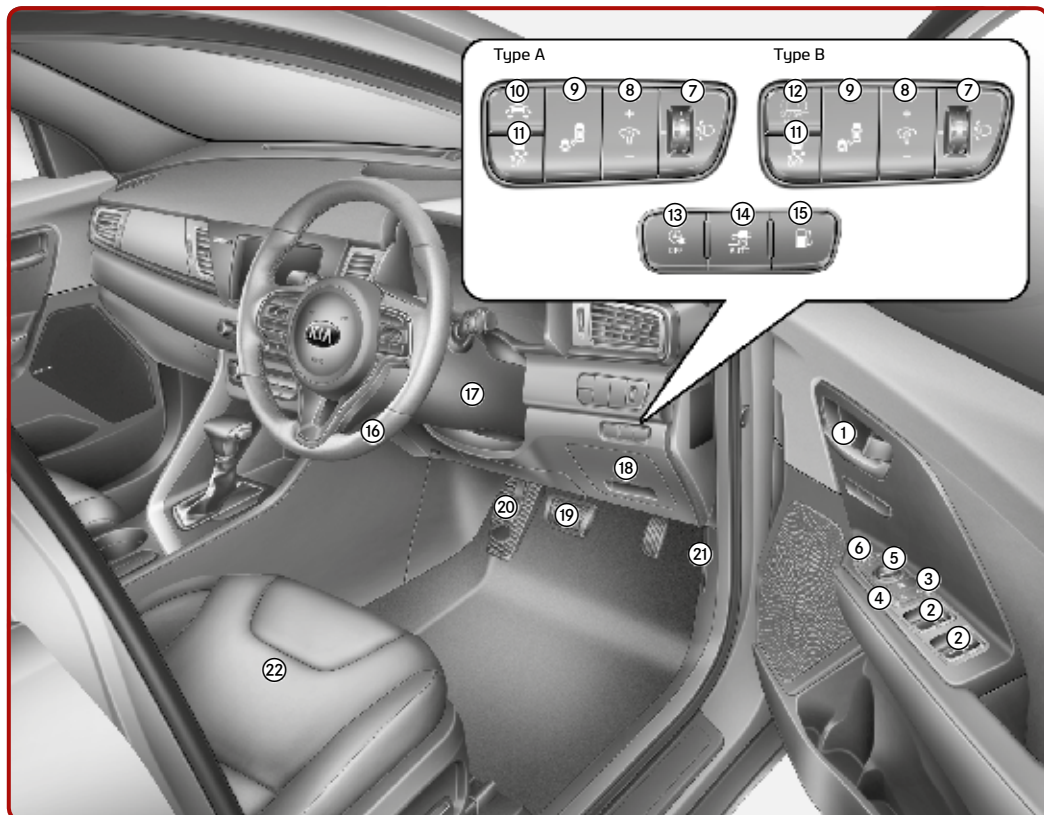

- | | | |
|---|--|---|
| ① Inside door handle [4] | ⑧ Instrument panel illumination control [4] | ⑮ Fuel filler lid release button [4] |
| ② Power window switches [4] | ⑨ BSD ON/OFF button* [6] | ⑯ Steering wheel [4] |
| ③ Central door lock switch [4] | ⑩ LKAS ON/OFF button* [6] | ⑰ Tilt and telescopic steering column control lever [4] |
| ④ Power window lock button [4] | ⑪ ESC OFF button [6] | ⑱ Interior fuse box [8] |
| ⑤ Outside rearview mirror control switch [4] | ⑫ 12V battery reset switch (plug-in)* [7] | ⑲ Brake pedal [6] |
| ⑥ Outside rearview mirror folding switch* [4] | ⑬ Scheduled charging deactivation button (plug-in)* [H7] | ⑳ Parking brake pedal [6/8] |
| ⑦ Headlight leveling control* [4] | ⑭ Auto Lock mode button (plug-in)* [H5] | ㉑ Bonnet release lever [4] |
| | | ㉒ Seat [3] |

* if equipped


[#] Number in brackets indicates chapter in Owner's Manual.
The illustrations in this guide may vary from the actual vehicle.

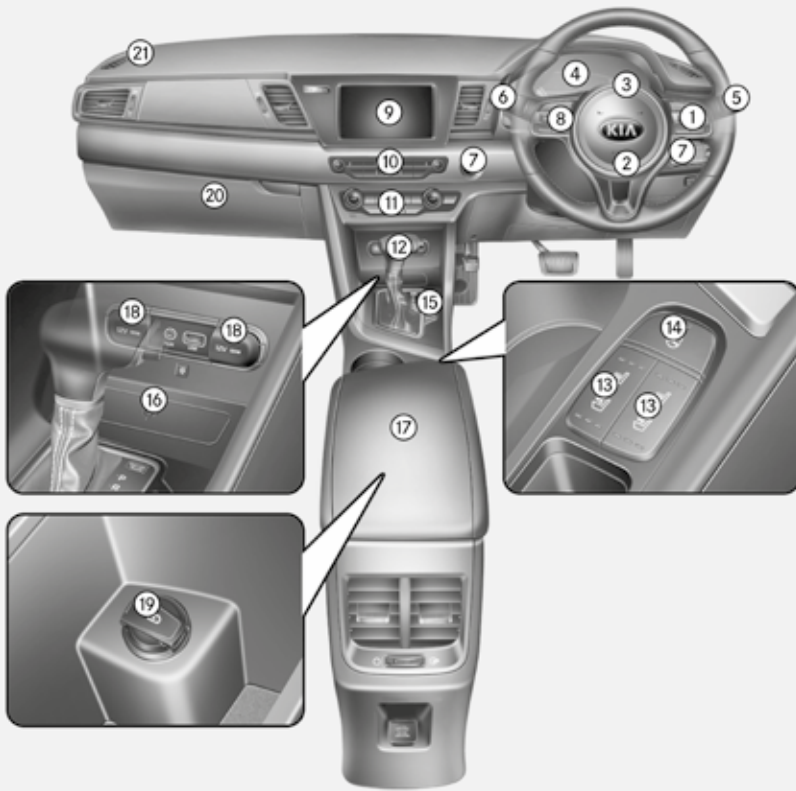

- | | | |
|--|--|-------------------------------------|
| ① Cruise control/Smart cruise control buttons* [6] | ⑨ AVN (Audio/Video/Navigation) [5] | ⑯ Smart phone wireless charger* [4] |
| ② Driver's front air bag [3] | ⑩ Hazard warning light [7] | ⑰ Center console storage box [4] |
| ③ Horn [4] | ⑪ Climate control system [4] | ⑱ Power outlet [4] |
| ④ Instrument cluster [4] | ⑫ Shift lever DCT [6] | ⑲ USB charger* [4] |
| ⑤ Wiper and washer control lever [4] | ⑬ Seat warmer/cooler button* [4] | ⑳ Glove box [4] |
| ⑥ Turn signal/Headlamp control lever [4] | ⑭ Heated steering wheel button* [4] | ㉑ Passenger's front air bag [3] |
| ⑦ Ignition switch or ENGINE START/STOP button* [6] | ⑮ Parking assist system ON/OFF button* [4] | |
| ⑧ Audio remote control buttons* [5] | | |


Instrument Cluster / Climate Control System

Instrument cluster for Plug-in Hybrid [4]

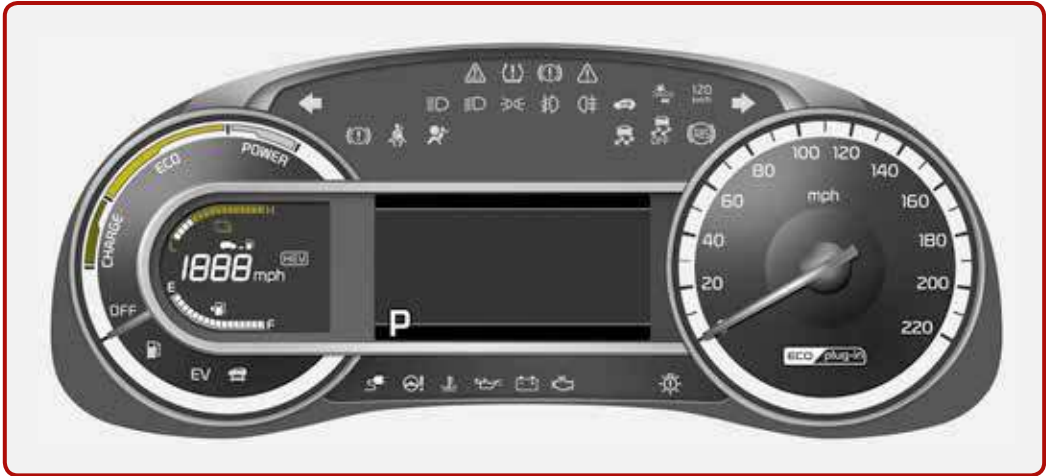


- | | | |
|-----------------------|--------------------------------|---------------------------------------|
| ① Hybrid system gauge | ④ Warning and indicator lights | ⑥ Battery SOC (State of Charge) gauge |
| ② Fuel gauge | ⑤ LCD information screen | ⑦ Distance to empty |
| ③ Speedometer | | |

Automatic climate control system [4]

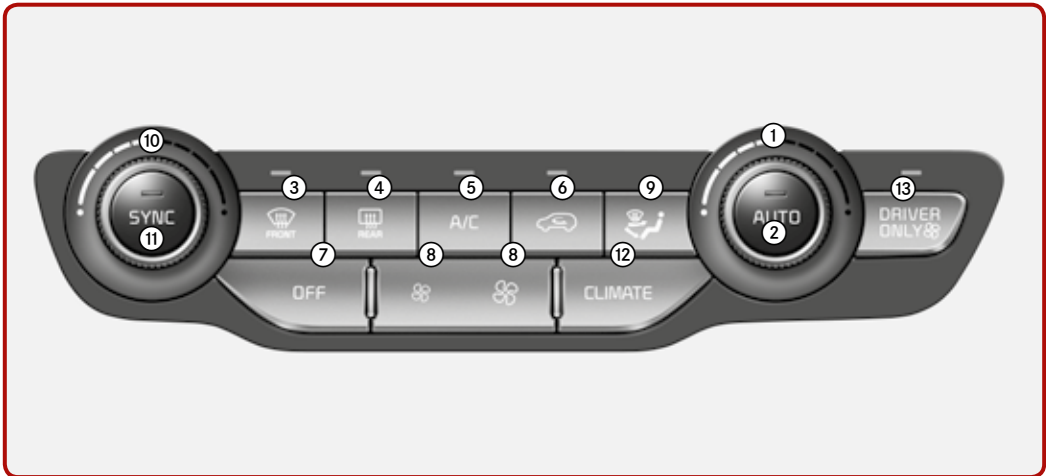

- | | | |
|--------------------------------|----------------------|-----------------------------------|
| ① Driver's temperature control | ⑤ Air conditioning | ⑩ Passenger's temperature control |
| ② AUTO (automatic control) | ⑥ Air intake control | ⑪ SYNC temperature control |
| ③ Front windscreen defroster | ⑦ OFF | ⑫ Climate button |
| ④ Rear window defroster | ⑧ Fan speed control | ⑬ Driver only select button |
| | ⑨ Mode selection | |


Windows [4]

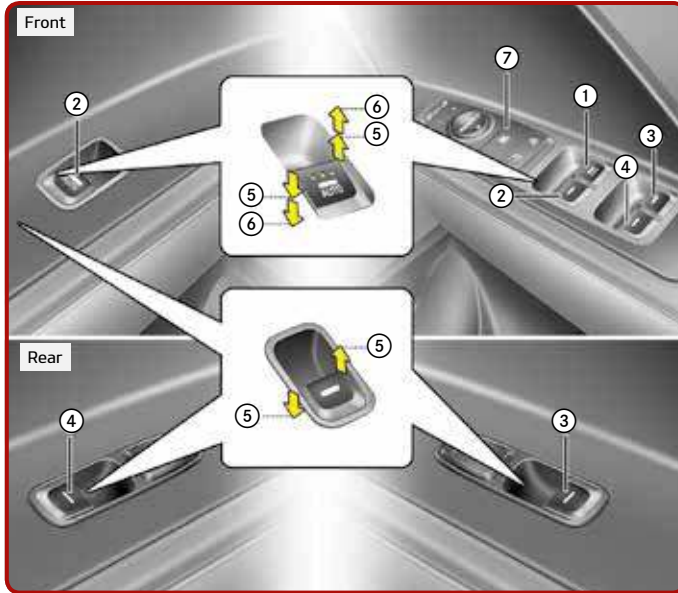

- ① Driver's door power window switch
- ② Front passenger's door power window switch
- ③ Rear door (right) power window switch
- ④ Rear door (left) power window switch
- ⑤ Window opening and closing
- ⑥ Automatic power window up*/down*
- ⑦ Power window lock button

Note: In cold and wet climates, power windows may not work properly due to freezing conditions.


Wipers and Washers [4]

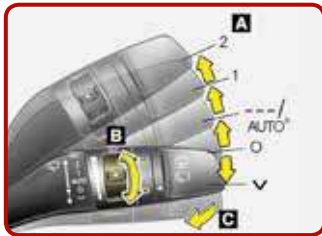

Front

- A: Front wiper speed control**
- 2 High wiper speed
 - 1 Low wiper speed
 - Intermittent wipe
 - AUTO* Automatic control wipe
 - 0 Off
 - ✓ Single wipe

- B: Intermittent wipe time adjustment**
C: Wash with brief wipes (front)*

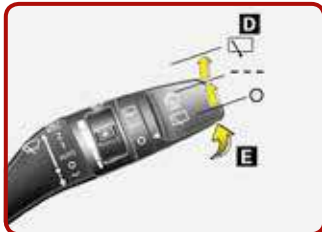

Rear


- D: Rear wiper/washer control**
- Continuous wipe
 - Intermittent wipe*
 - 0 Off
- E: Wash with brief wipes (rear)**

Lighting Control / Steering Wheel / Cruise Control System



Lighting control [4]

- ① OFF
- ② Auto light*
- ③ Position light
- ④ Headlight

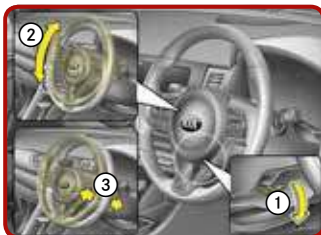

Tilt & telescopic steering [4]

Steering wheel adjustment:


- ① Pull down the lock release lever
- ② Adjust the steering wheel to the desired angle
- ③ Height adjustment

Lock the steering wheel by pulling up the lock release lever.




Heated steering wheel* [4]

When the ignition switch or engine start/stop button is in the ON position, press the button shown to switch on the heated steering wheel. The indicator on the button will illuminate. To turn off the heating function, press the button once again.

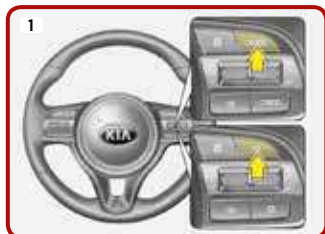


Cruise control system* [6]


ON-OFF button (CRUISE/RES+) to activate cruise control system

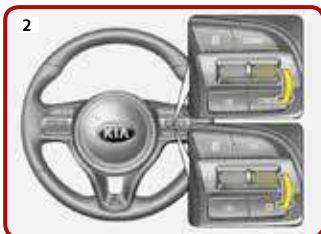


Set cruise control speed by moving the lever down to SET -

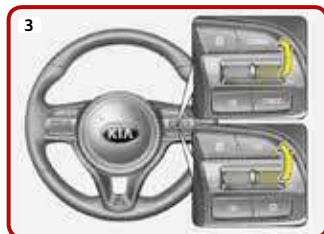


To increase cruise control set speed

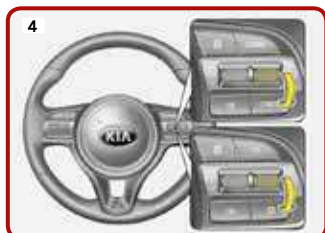

To decrease cruise control set speed

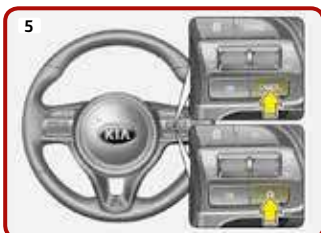

Cancel cruise control set speed by pressing the cancel button (CANCEL/O)

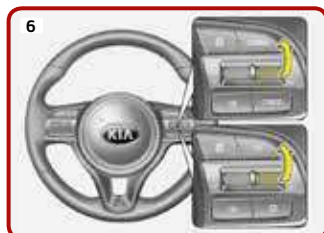

Resume cruising speed by moving the lever up to RES +



Operating door locks manually [4]



Central door lock switch [4]

- ① Lock
- ② Unlock



Child-protector rear door lock [4]



Opening the tailgate [4]



Closing the tailgate [4]




Emergency tailgate safety release [4]

- ① Push the mechanical key to the right



Opening the fuel filler lid [4]
Push the fuel filler lid release button.

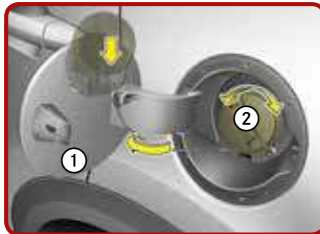


- ① Fully open the lid
- ② Turn cap counterclockwise to open

Closing the fuel filler

- > Turn cap clockwise until it "clicks" to ensure it is securely closed.
- > Close the lid and press the edge until it is securely locked.



Opening the bonnet [4]
Pull the release lever to unlatch the bonnet

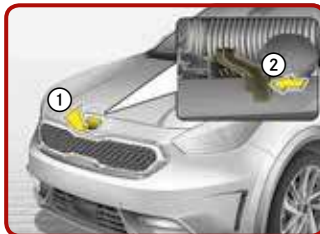


- ① Lift the bonnet slightly
- ② Push the secondary latch inside and lift the bonnet

Closing the bonnet

- > Before closing the bonnet, check if all filler caps are correctly installed and any other combustible material must be removed from the engine compartment.
- > Lower the bonnet halfway and push down to securely lock in place.

Seat / Air Bag / Child Restraint System

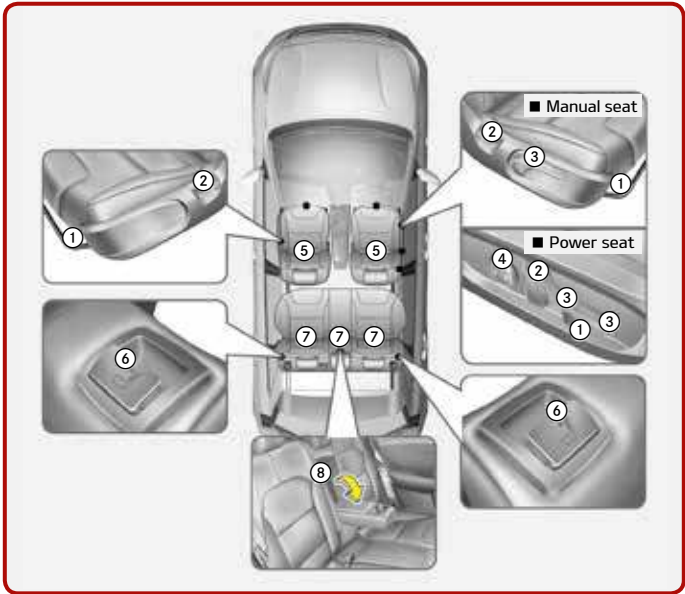

Seats [3]

Front seat

- ① Forward and backward
- ② Seatback angle
- ③ Seat cushion height (Driver's seat)
- ④ Lumbar support (Driver's seat)*
- ⑤ Headrest

Rear seat


- ⑥ Seatback folding
- ⑦ Headrest
- ⑧ Armrest*




Passenger's front air bag ON/OFF switch* [3]



Rearward-facing child restraint system [3]

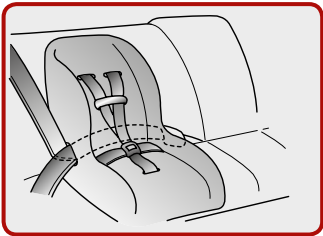

Installing a child restraint system by lap/shoulder belt [3]

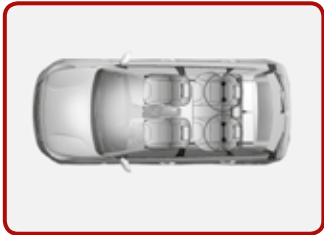

Securing with "ISOFIX" system and "Tether Anchorage" system* [3]



- ① ISOFIX Anchor Position Indicator
- ② ISOFIX Anchor



Securing with "Tether Anchorage" system [3]



How to connect charger [H10]

1. Depress the brake pedal and apply the parking brake.
2. Turn OFF all switches, move the shift lever to P (Park), and turn OFF the vehicle.
3. After unlocking doors, open the charging door by pressing it.



4. Remove any dust on the charging connector and charging inlet.
5. Hold the charging connector handle. Then, insert it into the charging inlet, until you hear a "click" sound. If it is not fully connected, a bad connection between the charging connector and the charging terminal may cause a fire.



6. Check if the charging cable connection indicator in the instrument cluster is turned ON.
Charging does not occur when the indicator is OFF. When the charging connector is not connected properly, reconnect the charging cable to charge.




Checking charging status [H13]

Indicator Lamp	Charging Status
Turns on (Green)	Charging in progress
Turns off	Not charged or fully charged
Slowly blink (Green) and then turn off (repeat for 3 min.)	Waiting for scheduled charging (turns off after 3 min.)
Quickly 2 blinks (Green) and then turn off (repeat during operation)	12V auxiliary battery charging
Blinks (Red)	Malfunction



Changing plug-in hybrid mode [H26]

Pressing the [EV/HEV] button changes the plug-in hybrid system modes, between Electric (CD) mode and Hybrid (CS) mode.

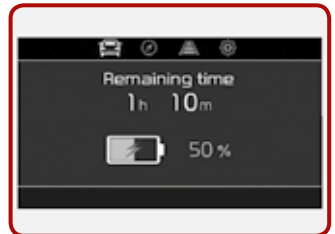

Estimated charging time displayed on instrument cluster

Towing / Spare Tyre, Jack And Tools / Tyre Mobility Kit


Towing [7]

When towing the vehicle in an emergency without wheel dollies, tow with the front wheels off the ground and:

1. Set the ignition switch in the ACC position.
2. Place the transaxle shift lever in N (Neutral).
3. Release the parking brake.


Emergency towing

If towing is necessary, it is recommended to have it done by an authorised Kia dealer or a commercial tow truck service.

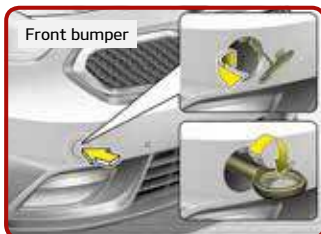

Removable towing hook [8]

1. Open the tailgate and remove the towing hook from the tool case.
2. Remove the hole cover by pressing the lower part of the cover on the bumper.
3. Install the towing hook by turning it clockwise until it is fully secured.
4. Remove the towing hook and install the cover after use.

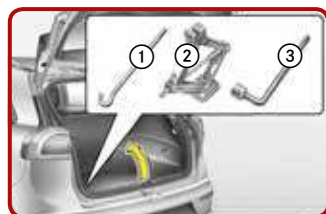

Spare tyre, jack and tools* [7]

The shown tools are stored in the luggage compartment. Pull up the luggage box cover to reach this equipment.

- ① Jack handle
- ② Jack
- ③ Wheel lug nut wrench




Tyre Mobility Kit* [7]

Please read the instructions before using the Tyre Mobility Kit.

- ① Compressor
- ② Sealant bottle



With the Tyre Mobility Kit you stay mobile even after experiencing a tyre puncture. After you ensure that the tyre is properly sealed you can drive cautiously on the tyre (up to 200 km (120 miles)) at a max. speed of 80 km/h (50 mph) in order to reach a vehicle or tyre dealer to have the tyre replaced.

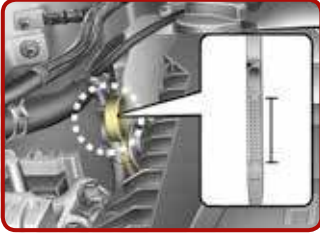


Checking the engine oil level [8]

Warm up the engine to operating temperature and switch off. On level ground pull the dipstick out and wipe clean before re inserting it fully. Pull the dipstick out again and check the level. The level should be between F and L.



Refilling engine oil [8]

Only refill with the specified engine oil, using a funnel to avoid spillage on engine components.

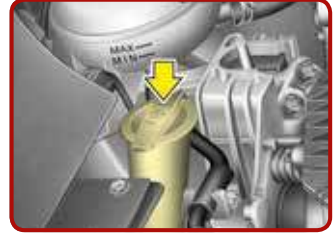

Checking the washer fluid level [8]

Check the fluid level and add fluid if necessary.

Additional Info*

Idle Stop & Go (ISG)

When enabled, ISG automatically stops the car's engine to reduce fuel consumption and emissions. The ISG function may not work if the car's battery charge status, ambient temperature and/or engine temperature is too low. Air conditioning/ heater control settings may also affect ISG function.

Hill-Start Assist Control (HAC)

This is designed to assist with hill starts by preventing the car rolling backwards when driving off. The system maintains the braking pressure in certain circumstances for 2 seconds enabling to pull away when you are ready.

Parking brake (handbrake)

When engaging the parking brake, apply the footbrake first and keep it depressed. Then apply the parking brake. Then depress the foot parking brake as far as possible

We strongly recommend to leave the car in first or reverse gear or in the 'P' (Park) position on automatics when leaving the car.

Bluetooth®

Many of our cars have Bluetooth® connectivity to enable the driver to safely enjoy the convenience of the mobile phone. For Bluetooth® compatibility please visit the owners section on our website.

Additional Info*

Kia Service App

The Kia Service App – now available for free on iPhone/iPad and Android. With the Kia Service App, you have (almost) all Kia dealers in Europe within reach*. Looking for a showroom or just a service, the app displays all dealers around your current location on the map. With one click you can call a dealer, visit their website or get directions to the showroom.

(*) In selected markets only.



Kia Service App



Kia Service App



For full details and instructions on any item contained in this quick reference guide, please read the owner's manual.

Copyright © 2019 Kia Motors Europe GmbH, all rights reserved.
19.000024 - QRG DE(P)HEV - EN-UK RHD



The Power to Surprise