



SERVICE BULLETIN

Classification:

EL15-003a

Reference:

NTB15-012a

Date:

March 24, 2015

2015 MURANO; DTC C1769 STORED AFTER BCM REPLACEMENT

This bulletin has been amended to change the title for clarification.
Please discard the previous version.

APPLIED VEHICLE: 2015 Murano (Z52)

SERVICE INFORMATION

After replacing a BCM in an Applied Vehicle the TPMS must be configured with the correct "DATA PART NO." to complete the repair **OR** a DTC C1769 (CONFIGURATION SETTING) may be set.

Use C-III plus through Manual Configuration to do this.

The configuration setting is based on the vehicle's tire pressure (see Table A below for vehicle tire pressures).

Configuration procedure is as follows:

1. Locate the "TIRE AND LOADING INFORMATION" sticker (Figure A, page 2) and then write down the correct tire pressure for the vehicle.
2. Choose the correct DATA PART NO. listed in Table A below for the vehicle's tire pressure and write it down.

Table A

MODEL GRADE	TIRE PRESSURE SETTINGS	DATA PART NO.
Platinum	240 KPA	40711-5AD0A
All Other	230 KPA	40711-5AA0A

Proceed to page 2.

Nissan Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. NOTE: If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Nissan dealer to determine if this applies to your vehicle.

NOTE: Figure A is of TIRE AND LOADING INFORMATION sticker, found in driver's side door jam, rotated 90°.



Figure A

3. Connect the plus VI to the vehicle.
4. Connect the AC adapter to the CONSULT PC.
5. Turn on the CONSULT PC, and then open C-III plus.
6. Press the vehicle's power ("ignition") switch one time without depressing the brake pedal.

- The meter and gauges will illuminate.

CAUTION: Do Not start the vehicle.

NOTE: Make sure all accessories are turned off.

7. After the plus VI is recognized, select **Re/programming, Configuration**.

NOTE: Make sure all applications other than C-III plus are closed.

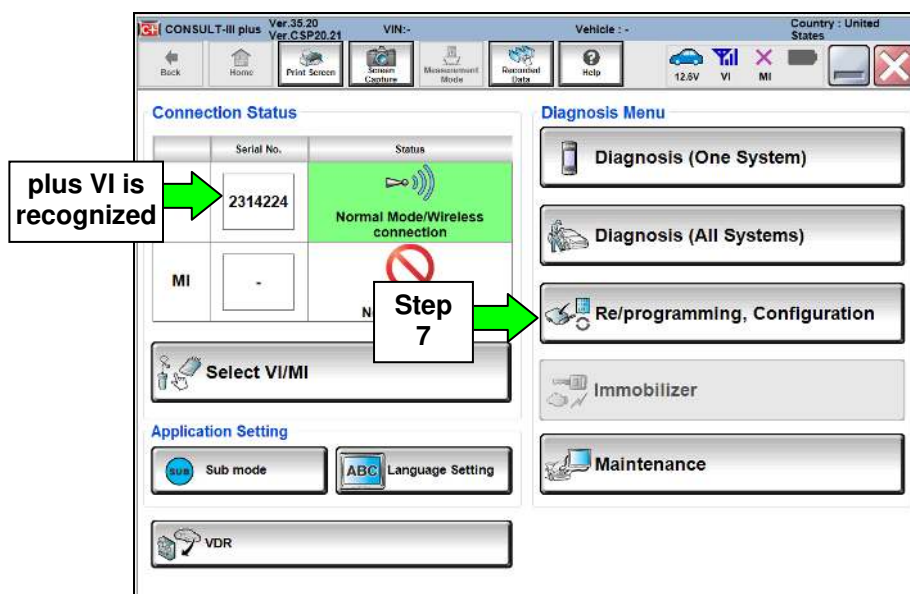


Figure 1

8. Click on the **Confirmed Instructions** box and then select **Next**.

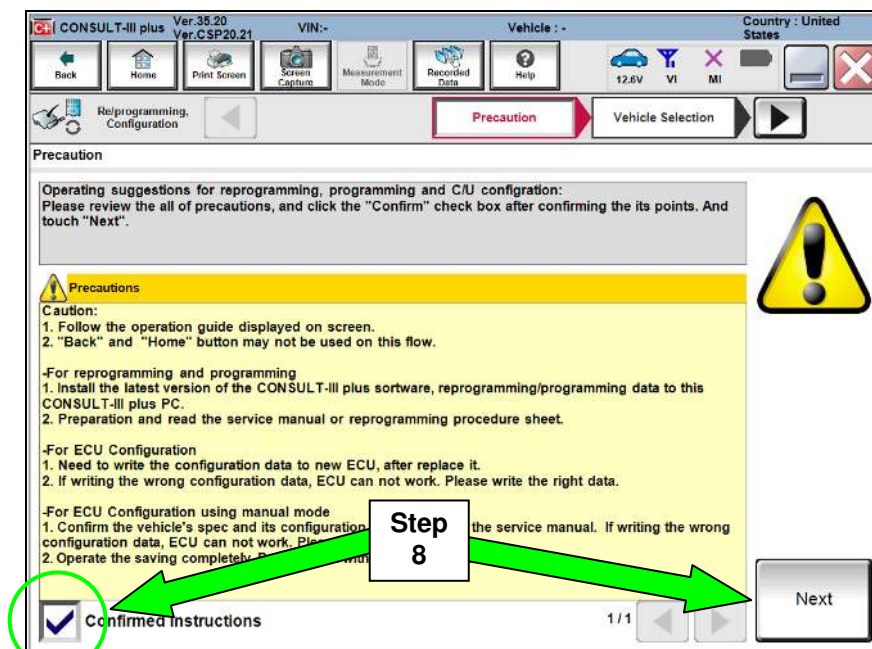


Figure 2

9. Select **MURANO** and **2015** or **Automatic Selection (VIN)**.

- If **Automatic Selection (VIN)** is selected, wait for the **Reading VIN** screen to complete (picture not shown).

10. Select **Select**.

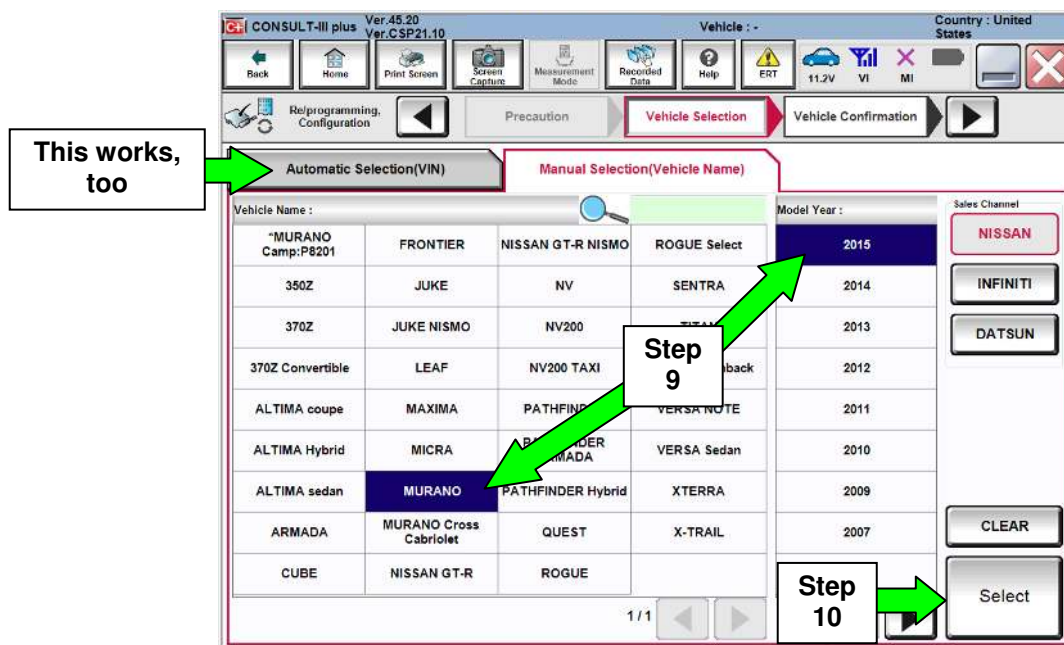


Figure 3

11. Verify the VIN in **VIN or Chassis #** matches that of the vehicle's.

- If the correct VIN exists, select **Confirm**.

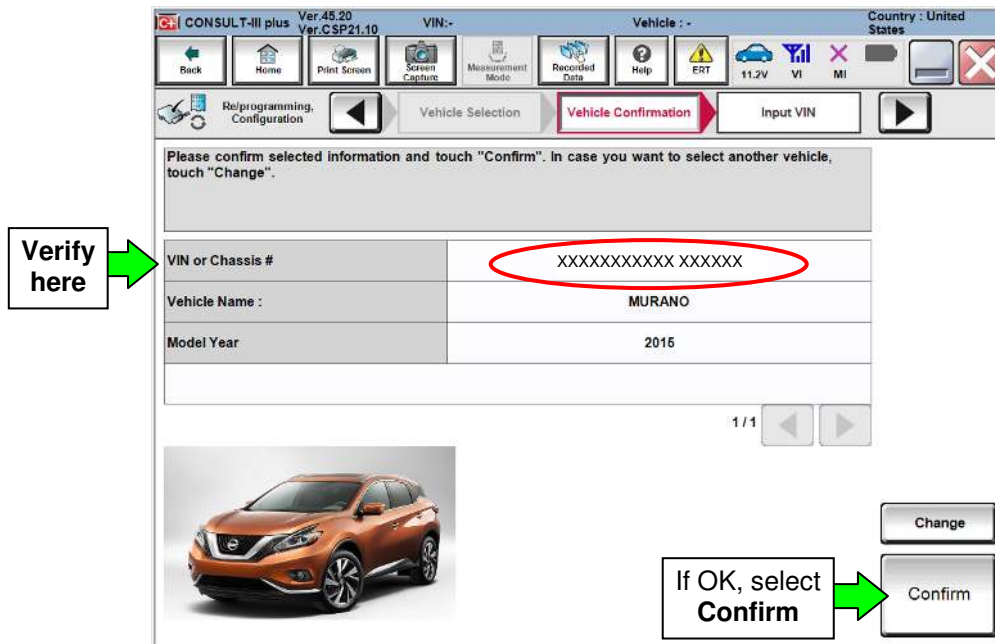


Figure 4

12. On the next screen, select **Confirm**.

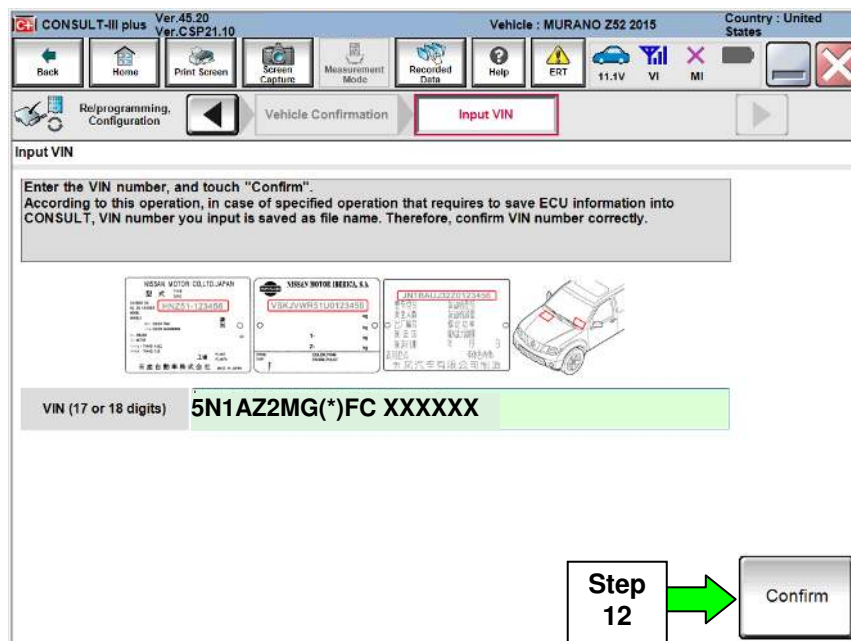


Figure 5

13. Select **AIR PRESSURE MONITOR**.

- Wait for system call to complete.

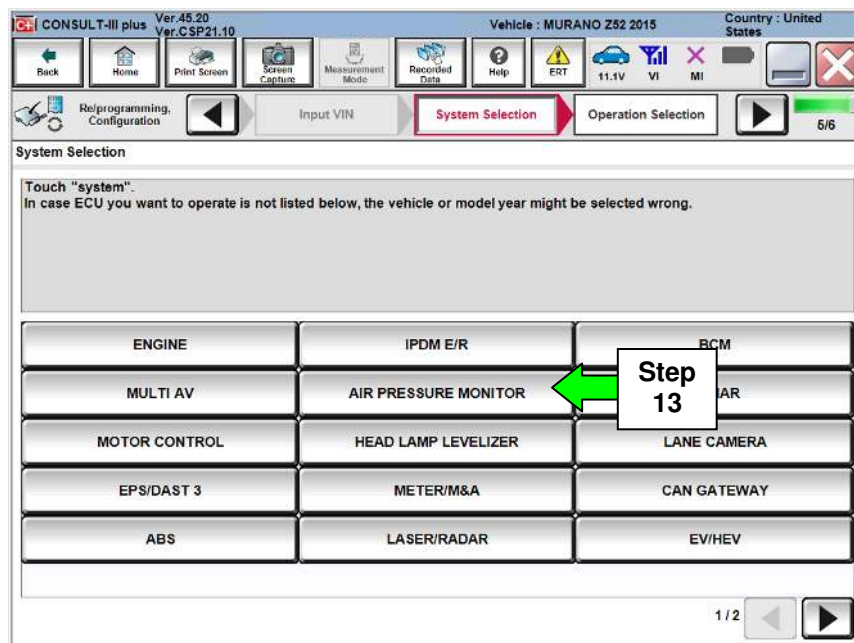


Figure 6

14. Select **Manual Configuration**.

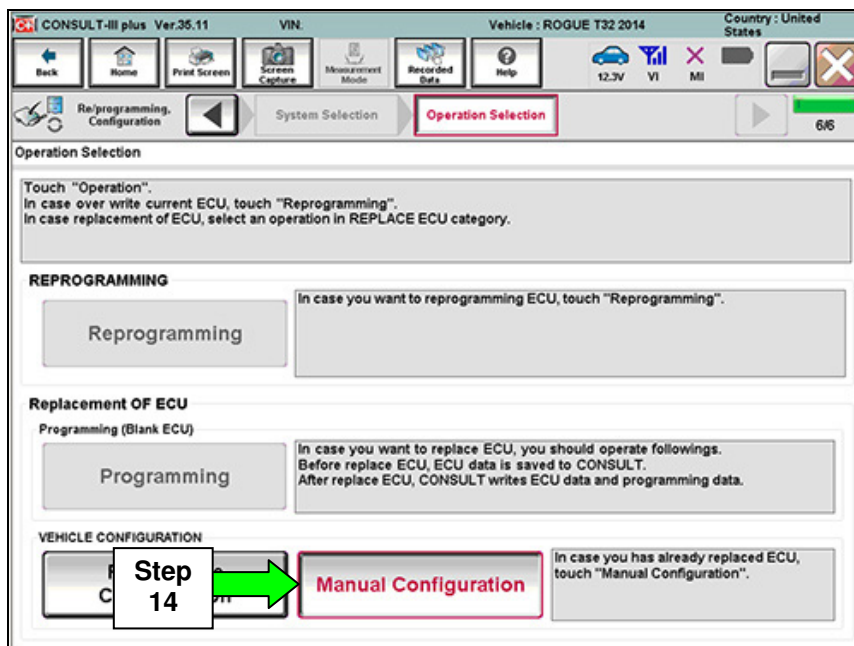


Figure 7

15. Select the **DATA PART NO.** number that was written down from step 2 on the first page.

16. Select **Next**.

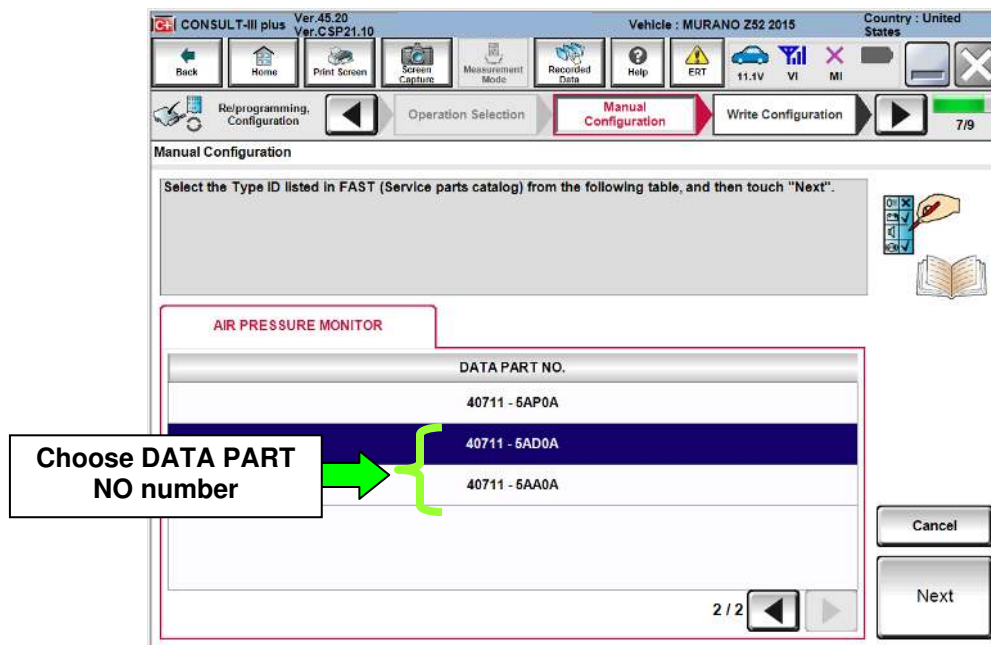


Figure 8

17. Confirm that the part number is correct and then select **OK**.

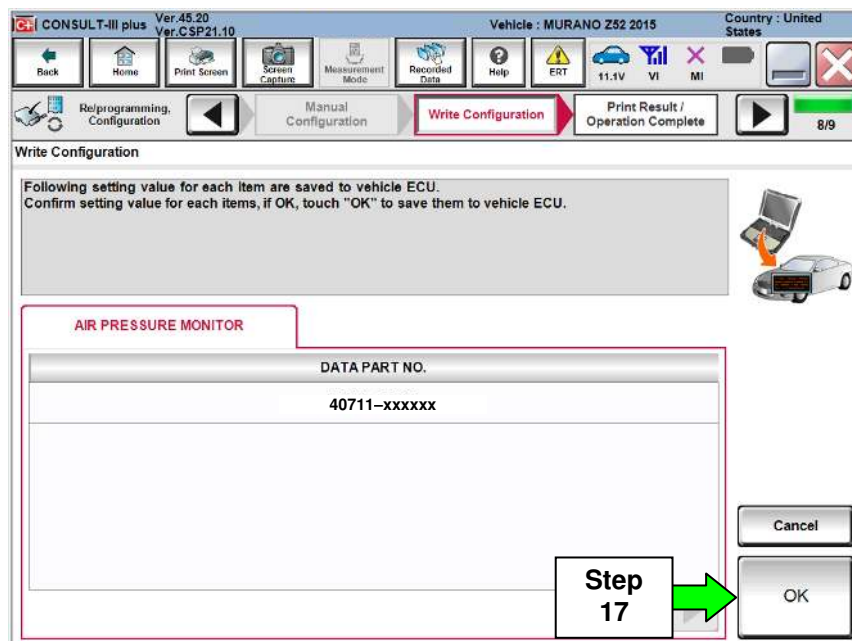


Figure 9

18. Select **Next** and wait for the data to transfer.

19. After the data transfer has completed select **End**.

20. Register all four TPMS sensors.

NOTE: Refer to the Electronic Service Manual (ESM), section **WT-Road Wheels & Tires** for further information.

21. Clear DTC's.

